


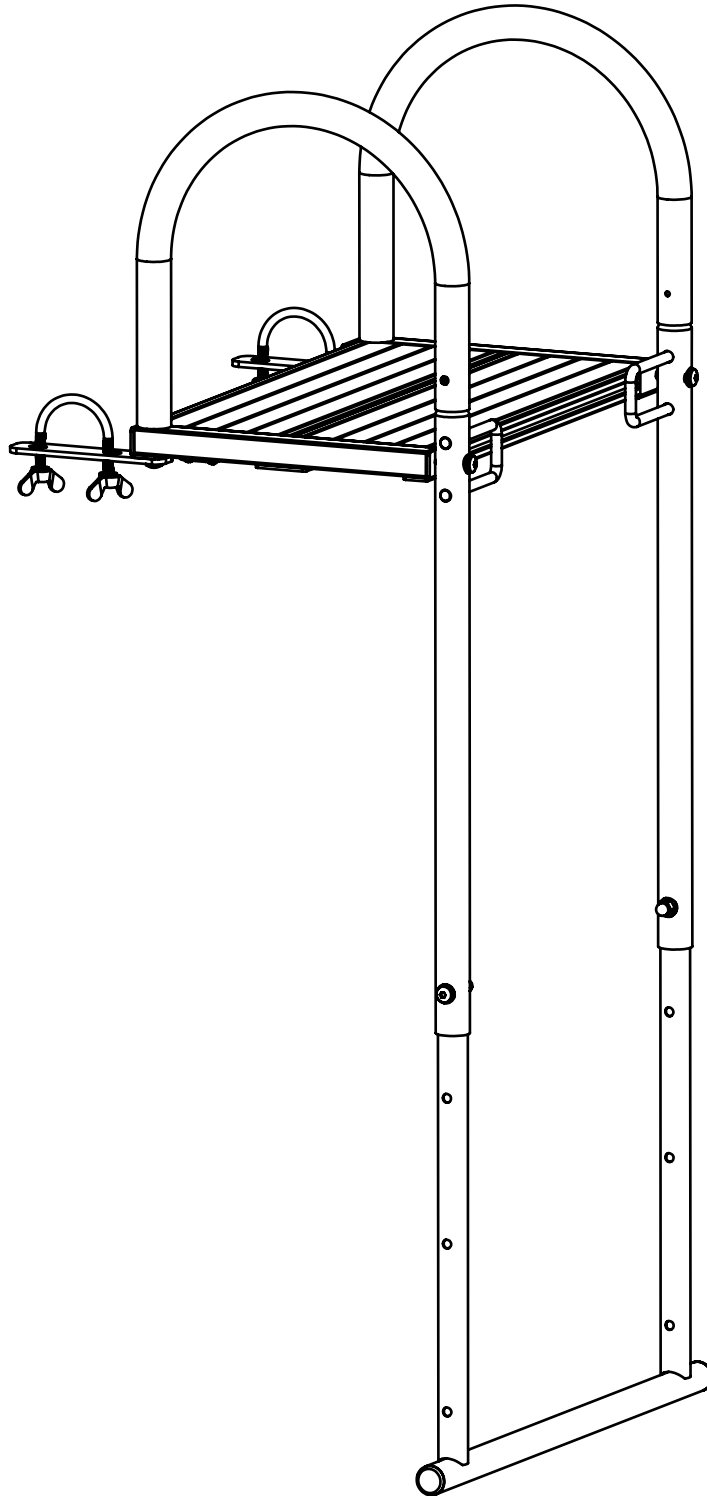

User manual
Gebrauchsanweisung
Gebruikshandleiding
Mode d'emploi

 

 
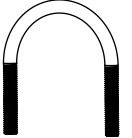
 

 
 
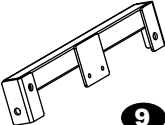
 

 
 
 



 

 




MAC-11101






Parts list


Item	#	Part.Nr.	
1	1	HN52254	 
	2	SL03061	
3	2	HN52257	
4	2	CN52259	  
5	4	GB95-85	
6	4	GB62-88 M8	
7	2	HN52263	 
8	2	CP52047	
9	1	HN52270	  
10	1	HN52274	
11	2	SN52251	
12	6	M8X45	    
13	2	M8	
14	6	M8	
15	6	GB T 845-ST4.2x16	
16	6	GB T 845-ST4.8x16	
17	1	CN52498	
18	1 set	258703	 
		CN65015	
19	2	CP52046	

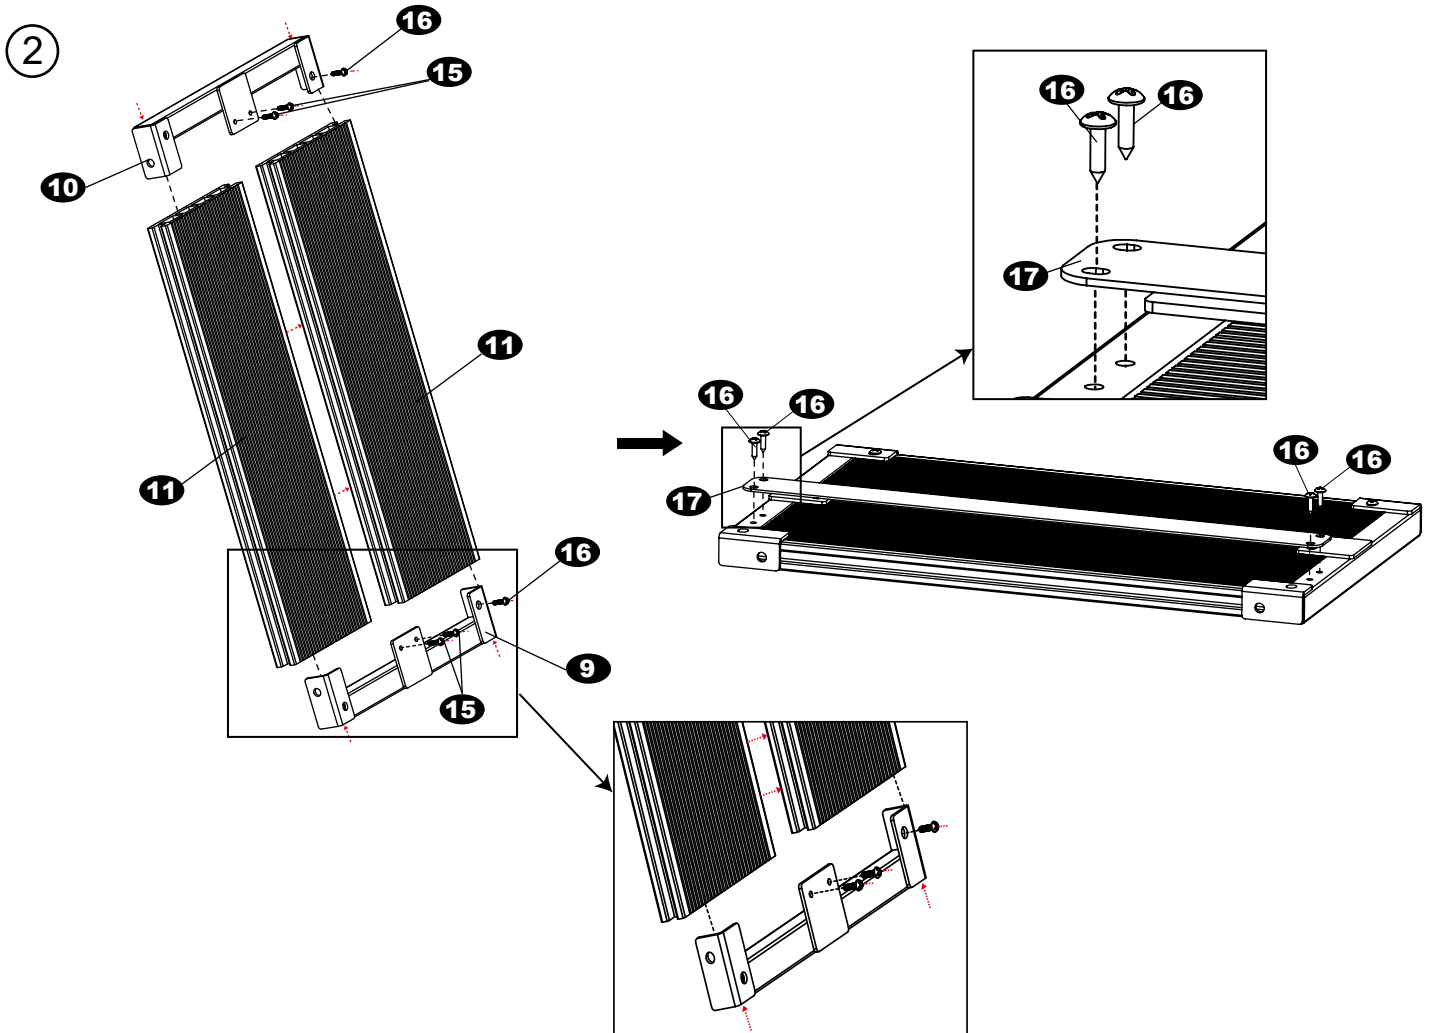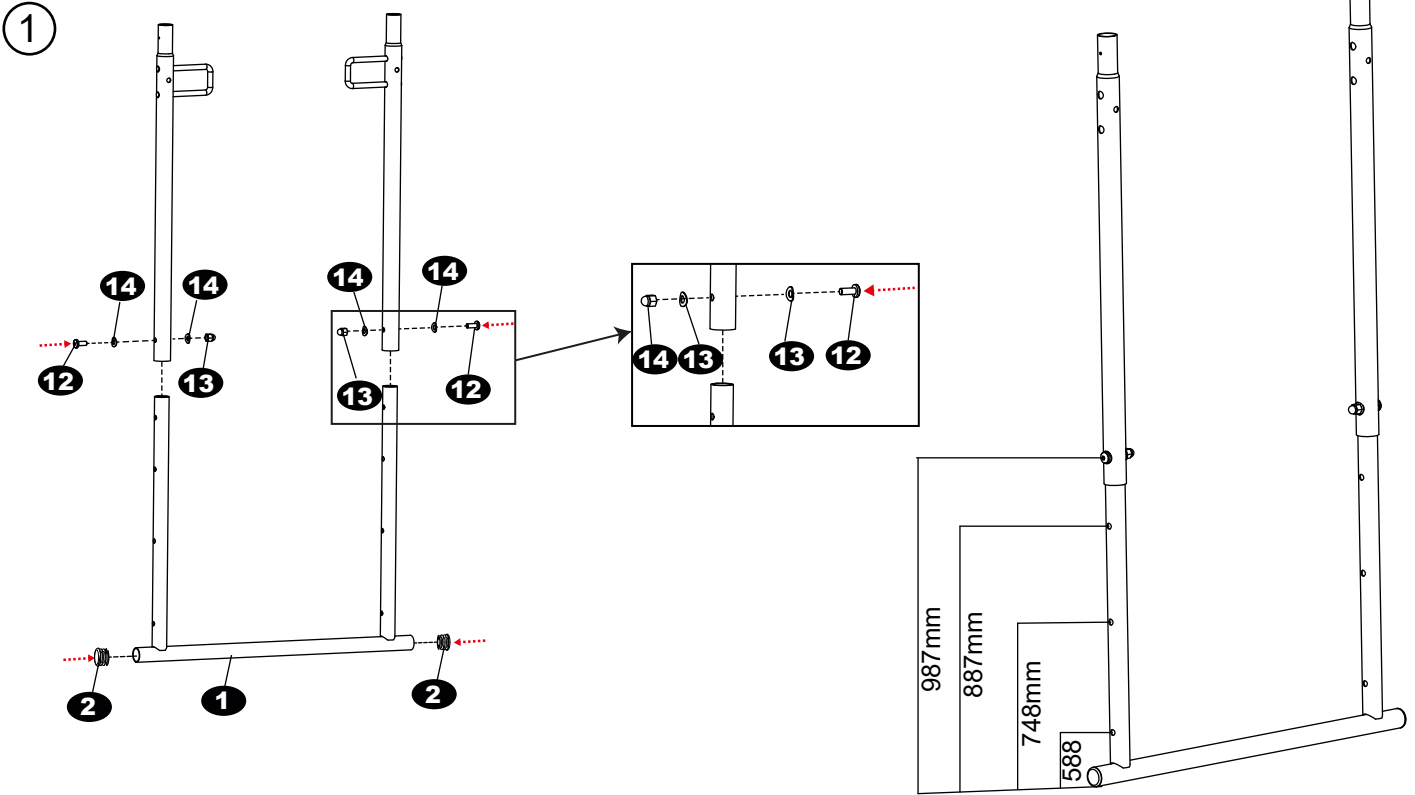

3

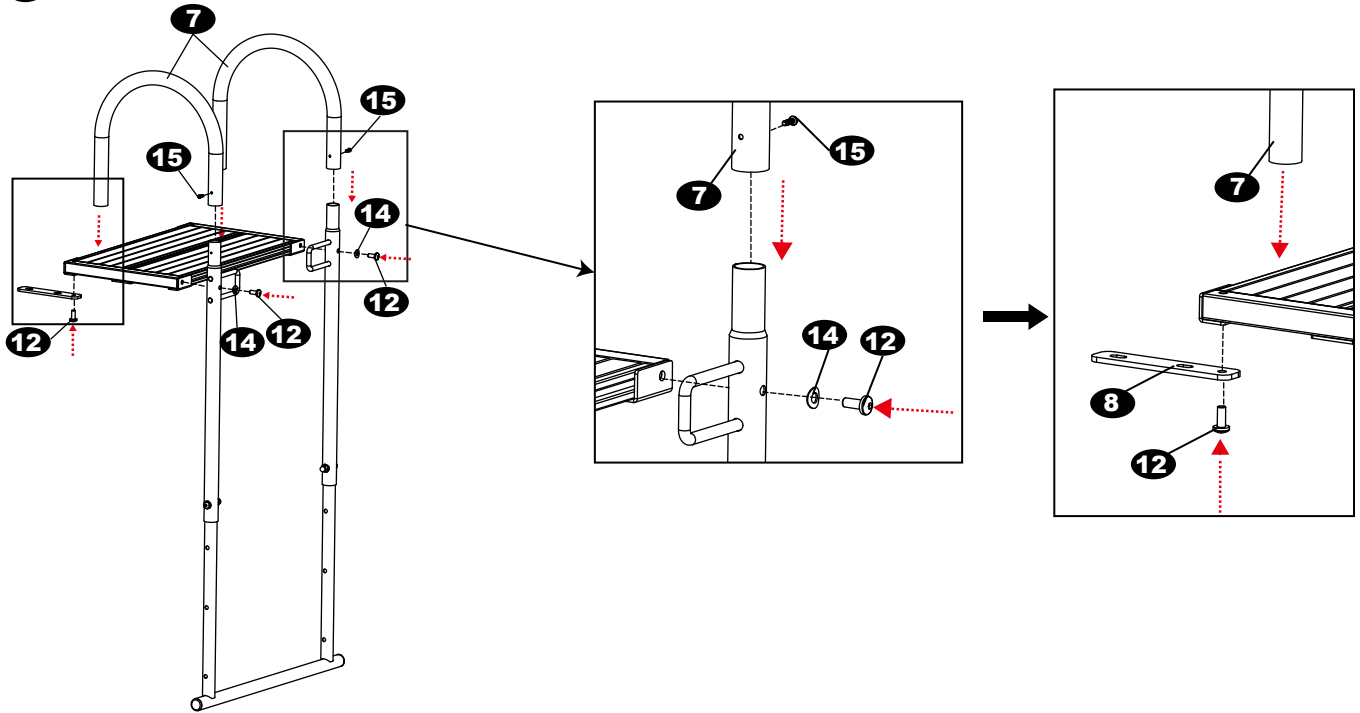

4

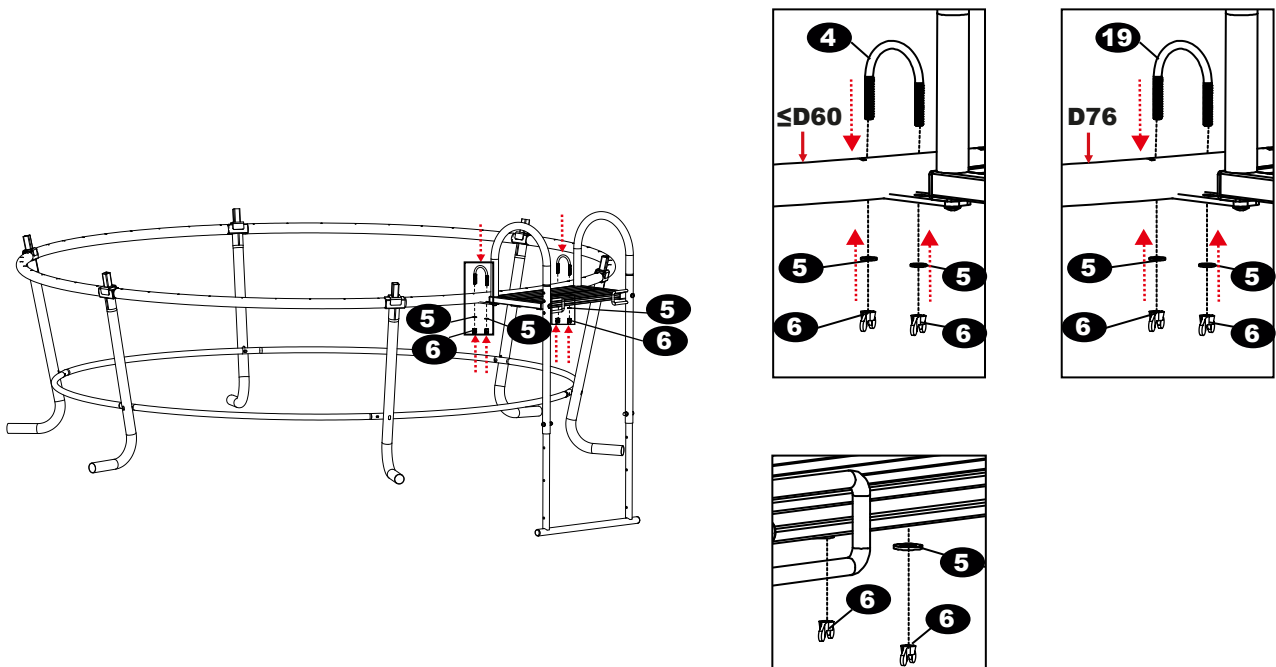

EXIT Toys
 Edisonstraat 83
 P.O. Box 369, 7000 AJ Doetinchem
 The Netherlands
 Tel. : +31 314 323 005
 Email : info@exittoys.com